


Uncle Brown

Installation
& User Manual

Uncle Brown **ST12P**

Smart Toilet

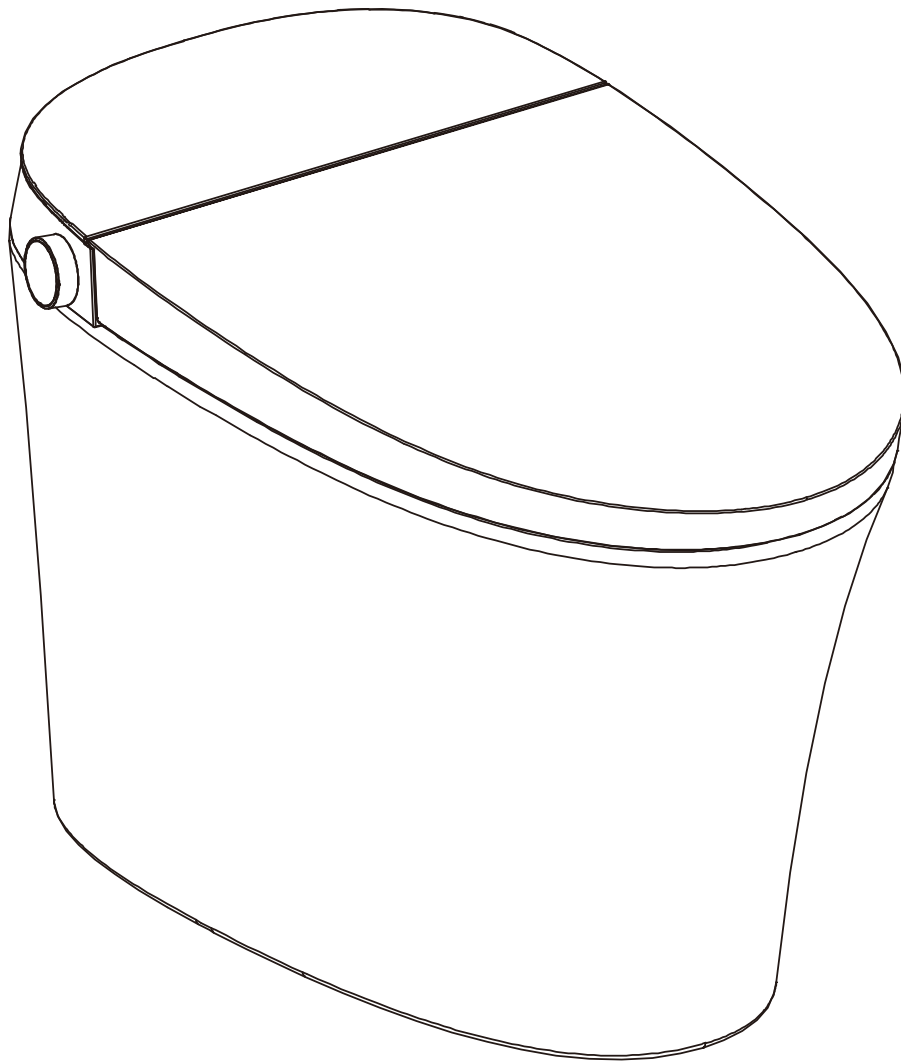

Contents

Important Safeguards	1
Important Information	1
Grounding Instructions	2
Explanation of Terms and Symbols	2
Overall Sketch	8
Function Table	9
Product Installation	10
Tools Needed for Installation	10
Parts Included	10
Prior to Installation	11
Installation of Smart Toilet	12
Installation of Battery Pack	15
Installation of Remote Control Holder	16
Product Test Run	17
Usage Instructions	18
Function Explanations	18
Foot Sensor Operations	22
Knob Operations	22
Remote Control Operations	23
Daily Maintenance	26
Maintenance of Ceramics, Seat and Lid	26
Maintenance of the Nozzle	27
Cleaning of the Filter	27
Maintenance During Winter Season	28
Troubleshooting	29
Specifications	31
Warranty	32

- Thank You for Choosing Uncle Brown. Please read the instructions carefully before installation and keep it available for future maintenance or reference.
- We are not responsible for the accidents resulting from the user's negligence.
- Uncle Brown reserves the right to make revisions to this manual without notice.



Need help? Contact Uncle Brown Customer Service Team.

Phone: (+1)209-528-9961

Monday to Friday

Email: support@unclebrowna.com

Important Safeguards

Read All Instructions Before Using

Important Information

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:



DANGER - To reduce the risk of electrocution:

1. Do not use while bathing.
2. Do not place or store product where it can fall or be pulled into a tub or sink.
3. Do not place in or drop into water or other liquid.
4. Do not reach for a product that has fallen into water. Unplug it immediately.
5. Do not wash the main unit or electrical plug with water or detergent.
6. During installation, disassembly, repair and maintenance of the product, the power plug must be switched off and the water supply be shut off.



WARNING - To reduce the risk of burns, electrocution, fire, or injury to persons:

1. Close supervision is necessary when this product is used by, on, or near children or invalids.
2. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by Uncle Brown.
3. Never operate this product if the cord or plug is damaged, if it is not working properly, or if it has been dropped, damaged, or immersed in water. If any of these conditions apply, contact our Customer Service Team directly.
4. Keep the cord away from heated surfaces.
5. Never block the air openings of the product or place it on a soft surface, such as a bed or couch, where the openings could be blocked. Ensure that the air openings remain free of lint, hair, and similar debris.
6. Never use while sleeping or drowsy.
7. Never drop or insert any object into any opening or hose.
8. Do not use outdoors or in environments where aerosol (spray) products are being used or oxygen is being administered.
9. Connect this product to a properly grounded outlet only. See **Grounding Instructions**.
10. Caution - Risk of electric shock. Do not remove the toilet lid (or back) on your own. Refer servicing to qualified service personnel.

Grounding Instructions

This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. The product is equipped with a cord that has a grounding wire and a grounding plug. The plug must be inserted into an outlet that is properly installed and grounded.



DANGER - Improper use of the grounding plug can result in a risk of electric shock.

1. If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either fat blade terminal. The wire within insulation having an outer surface that is green with or without yellow stripes is the grounding wire.
2. Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded.
3. This product is factory equipped with a specific electric cord and plug to permit connection to a proper electric circuit. Make sure that the product is connected to an outlet having the same configuration as the plug.
4. No adapter should be used with this product. Do not modify the plug provided - if it will not fit the outlet, have the proper outlet installed by a qualified electrician. If the product must be reconnected for use on a different type of electric circuit, the reconnection should be made by qualified service personnel.

Explanation of Terms and Symbols

To ensure proper and safe use of this product, please read this section carefully before use. After reading, store this manual in a safe place for any needed future reference.

The hazards and warnings listed herein are important to our user's safety. Significant consequences may result from failure to heed warnings. The company will not be held liable for any injuries or damages caused by improper use or failure to follow the safety instructions.

Warning

Indicate possible injury resulting from improper usage due to negligence of this sign.

Attention

Indicate human injury or property loss that may result from improper usage due to negligence of this sign.



Indicate a strict request to follow noted precautions when used with the above "Warning" and "Attention" signs.




Prohibit any individual from performing any action with this symbol.



Prohibit any individual from dismantling product.




Keep product away from any wet environments, including, but is not limited to, humid environments, close proximities to baths, showers or sinks.

 Do not touch!

 Do not touch with a wet hand!

 Keep away from any extreme heat or fire!

 Operate only as instructed!


 Pull out the power plug!

 Protective grounding.

Warning


This product needs to be properly grounded.

- ✘ Risk of electric shock.
- ✘ If unsure, contact an electrician.




Do not place a lit cigarette along with other burning objects into the unit.

- ✘ Risk of fire.



Do not touch, insert or pull out the power plug with a wet hand.

- ✘ Risk of electric shock.


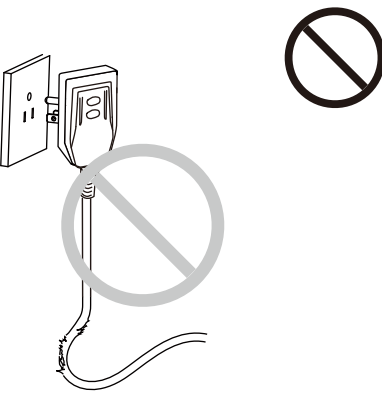


Do not use during thunderstorms (pull out the power plug during storms).

- ✘ Failure in doing so may lead to injury or fault in the product.


Do not use a power socket in poor condition or a damaged power plug.

- ✘ Risk of fire and/or electric shock.




When the seat ring or the lid is damaged, to avoid any harm, be sure to pull off the power plug, close the water source and contact your local electrical installation company for replacement.

- ✘ Risk of fire and/or electric shock.



The power socket in use should be within the specified range.

※ Risk of fire and/or electric shock.

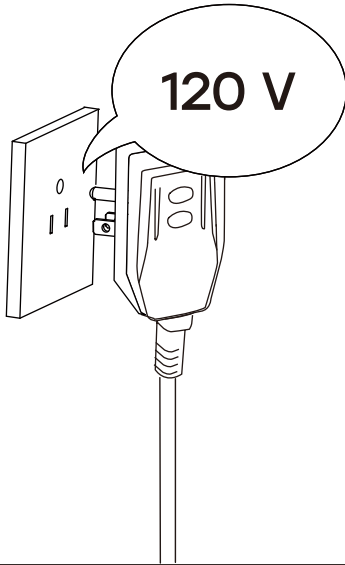

Regularly pull out the power plug and wipe off any dust on the power plug using a clean dry cloth.

※ Risk of fire.



Any person with a disability, the elderly, and children should be using this product with the supervision of another individual.

※ Be advised that sitting on the heated seat for an extended amount of time may result in burns.



Do not pull, damage, bend, twist, stretch, roll, bundle, clamp or squeeze the cord. Do not place anything on the cord.

※ Risk of fire and/or electric shock.



This product is not a toy. Advise children not to play with product.

※ Risk of injury.



If the power cord is damaged, to prevent any injuries or accidents, it should be replaced by a professional.

※ Risk of fire and/or electric shock.




Do not dismantle, repair or alter this product on your own. Call in a professional for further advice.

※ Risk of fire, electric shock, and/or other accident that may lead to injury.



For cleaning or maintenance of plastic parts, do not use any harsh cleaning agents. (These include, but are not limited to products such as concentrated sulfuric acid, concentrated nitric acid, glacial acetic acid, carbon tetrachloride, chloroform, benzene, phenol, methylphenol, dimethylformamide, methyl ether, soybean oil, acetate, 40% nitric acid, thick salt acid, 95% alcohol, gasoline, kerosene, etc.)

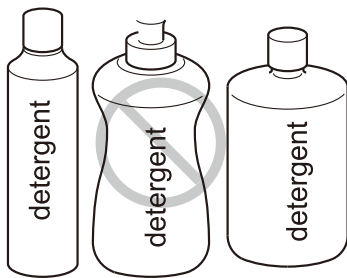


※ Risk of damaging parts that can lead to accidents and injuries.

Do not use polluted water or water meant for industrial use.



- ※ Risk of cystitis and dermatitis.
- ※ Untreated water may also cause internal corrosion of the product and may cause electrical shock or a fire.

Do not apply any force to the unit's seat and lid. Do not stand on the lid or open or close the lid and the seat forcefully.

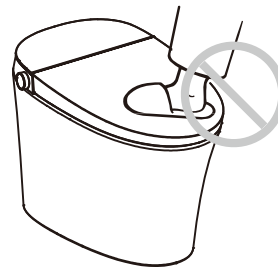


※ Risk of product damage and/or user injury.

Do not add water or detergent into the unit or onto the wireless remote control. Do not soak the product with water or cleaner.



※ Risk of fire and/or electric shock.

Do not place your hand or any other object into the dryer trap, and do not cover the dryer and dryer trap during product use.

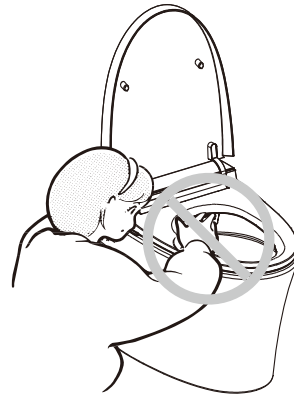

※ Risk of fire, electric shock and/or other accident that may lead to user injury.

Do not install the product in a humid environment or a soaked room. Do not spray or soak this product with any form of liquid to prevent any damage to the product.



※ Risk of fire, electric shock, and/or other accident that may lead to user injury.

Do not spray urine at the dryer.



※ Risk of electric shock.

Battery Warning

Read the following for proper battery usage.

- ① Properly install the battery according to its correct polarity.
- ② Remove the battery during long periods without use.
- ③ Replace the battery in time.
 - ✧ Failure to do so may result in interrupted control signals.
- ④ Cover the battery with tape before disposal. This will prevent battery fluid leaks that may cause fire and/or other damages.
- ⑤ Place the battery out of children and infant reach.
 - ✧ If battery is swallowed, contact a doctor immediately.
- ⑥ If battery fluid leaks onto user, quickly rinse off using clean water.
- ⑦ If battery fluid gets into eyes, do not rub your eyes. Quickly rinse it with clean water and consult a doctor immediately.
 - ✧ Failure to do so may result in vision impairment or blindness.



When the battery is in use, do not do the following operations:

- ① Do not hold or store with metal objects (such as a necklace or a watch).
- ② Do not mix new and old batteries.
- ③ Do not pull apart battery or throw it into water and/or fire. Battery fluids may cause a fire.



Attention

Do not use the heated seat or warm dryer temperature for an extended amount of time.

- ※ Extended use may result in burns.



Avoid direct sunlight or heat.

- ※ Risk of product discoloration.



While using this product, make sure that the skin is in contact with the seat sensor area. Otherwise, the product may not operate correctly.

- ※ Children and smaller individuals may have trouble staying in contact with sensor area.



Do not spray urine in the direction of the bidet nozzle.

- ※ Doing so may result in blockage to the bidet nozzles and cleaning area.



Do not supply electricity with an external switch, i.e., connecting the universal part to a timer switch.

- ※ Risk of problems caused by improperly resetting the thermal breaker.



Pull out the power plug when the product is in disuse for an extended amount of time. Make sure to shut off the water and remove the water inside the product.

- ※ Risk of fire, leakage and product damage.



When storing or transporting in cold climate, make sure to remove all water from the unit. Product may crack and other damages may occur due to freezing water.

- ※ Risk of fire, leakage and product damage.




In case of sudden power failure, pull out the power plug and turn off the angle valve to prevent water leakage.




- ※ Risk of water leakage and/or property loss.



Overall Sketch

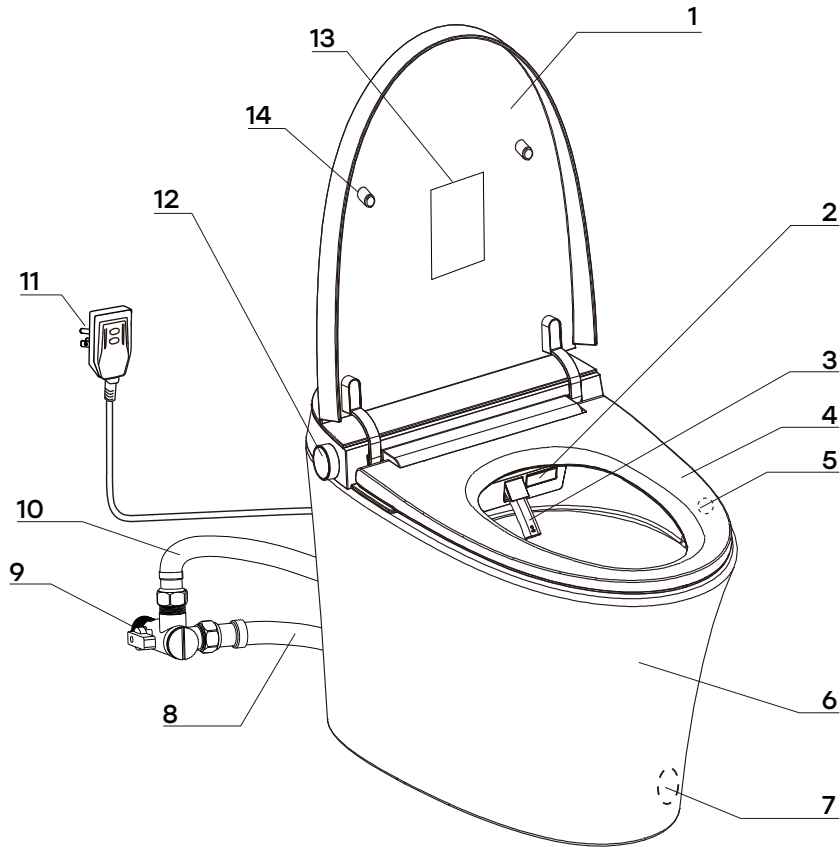

1	Lid
2	Warm Dryer
3	Detachable Nozzle
4	Heated Seat
5	Seat Sensor
6	Ceramic Toilet Bowl
7	Foot Sensor
8	Flush Water Hose </td
9	Angle Valve
10	Clean Water Hose
11	Power Plug
12	Knob
13	Caution Label
14	Cushion Pad

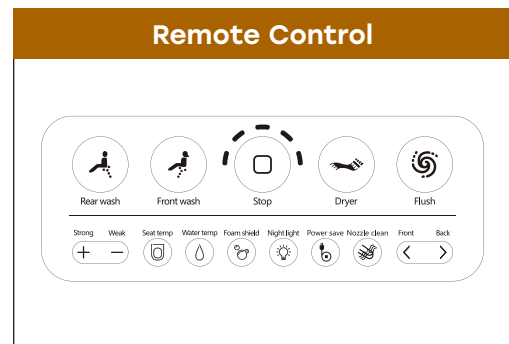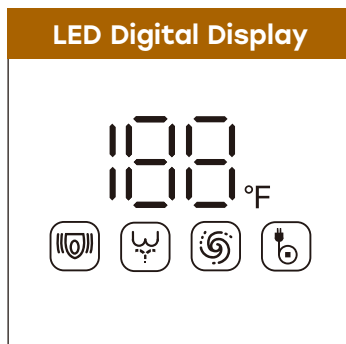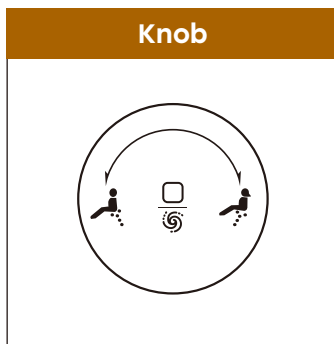

※ Two AAA batteries for the remote control are included in the product package.

Function Table

Category	Model	
	Functions	ST12P
Hygiene	Front Wash	●
	Rear Wash	●
	Child Wash	●
	Movement Wash	●
	Self-cleaning Nozzle	●
	Detachable Nozzle	●
	Nozzle Clean	●
	Anti-bacterial Seat	●
	Easy-clean Glaze	●
Comfort	Pre-wet	●
	Instant Heating	●
	Adjustable Water Temperature	●
	Adjustable Water Pressure	●
	Bubble Wash (Water & Air Mixed)	●
	Adjustable Nozzle Position	●
	Heated Seat	●
	Adjustable Seat Temperature	●
	Warm Dryer	●
	Adjustable Dryer Temperature	●
	Foam Shield	●
	Auto Deodorization	●
Convenience	Plasma Sterilization	●
	ADA Height	●
	Auto Wash	●
	Auto Flush	●
	Drying Flush	●
	Blackout Flush	●
	Remote Flush	●
	Kick Flush	●
	LED Digital Display	●
	Night Light	●
	Four Seasons Temperature Sensing	●
Safety	Soft Close	●
	Factory Data Reset	●
	SUS Filter	●
	Air Isolation & Backflow Prevention	●
Safety	Multiple Protections	●
	Fire and Heat Resistant	●


Note:

The blackout flush batteries for power outage are not included and must be purchased separately by yourself. If you have any questions, please contact our Customer Service Team.

Product Installation












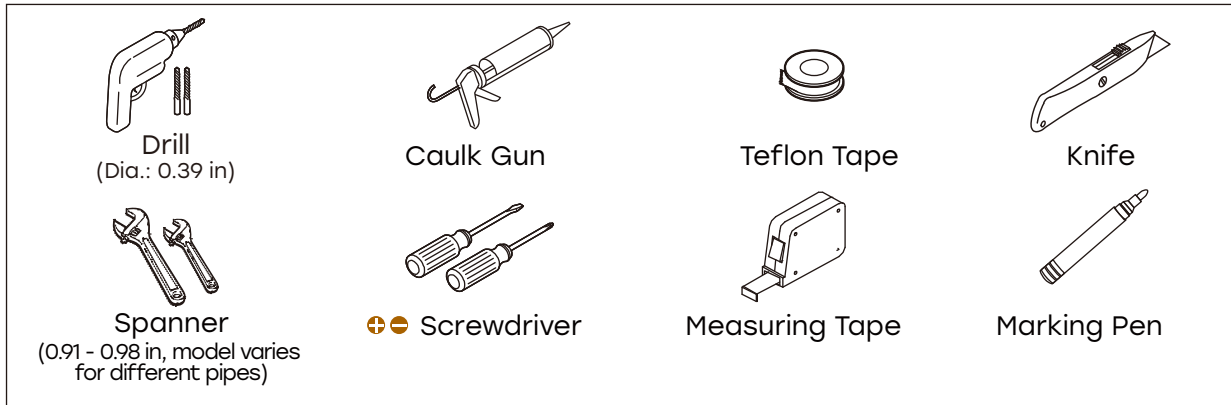




Tools Needed for Installation

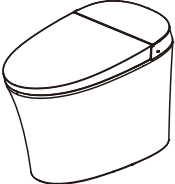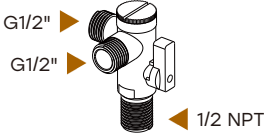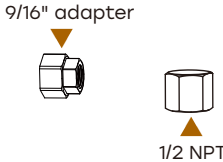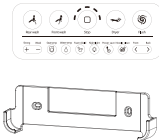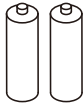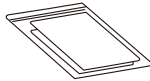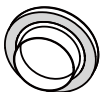Please have these tools prepared prior to installation.



Parts Included

Please confirm that all items below are inside the box.


<p>Smart Toilet (1 pc)</p> 	<p>Angle Valve (1 pc)</p> 	<p>Adapter (2 pcs)</p> 
<p>Remote Control Set (1 pc)</p> 	<p>Two AAA Batteries</p> 	<p>Installation & User Manual</p> 
<p>Wax Ring (1 pc)</p> 	<p>Floor Flange (1 pc)</p> 	
<p>Mounting Accessory Kit:</p> <ul style="list-style-type: none"> <li style="width: 33%; text-align: center;">  Expansion Bolt (4 pcs) <li style="width: 33%; text-align: center;">  Mounting Block (2 pcs) <li style="width: 33%; text-align: center;">  Fixing Sleeve (2 pcs) <li style="width: 33%; text-align: center;">  Screw (6 pcs) <li style="width: 33%; text-align: center;">  Bolt (2 pcs) <li style="width: 33%; text-align: center;">  Decorative Cap (2 pcs) <li style="width: 33%; text-align: center;">  Washer (2 pcs) <li style="width: 33%; text-align: center;">  Nut (2 pcs) 		

Prior to Installation


Please confirm that all the aforementioned items in the package are present. In case of any missing parts, please feel free to contact our Customer Service Team. Illustrations above are for references only. The ceramic product may have slight deformation during the firing process. Please consult the actual product for accurate details.

Verify the product dimensions and secure enough installation space. The rough-in size refers to the distance between the center of the toilet flange to the finished back wall.

※ All dimensions are manually measured with a certain degree of error. For the specific size, please refer to the actual product received.

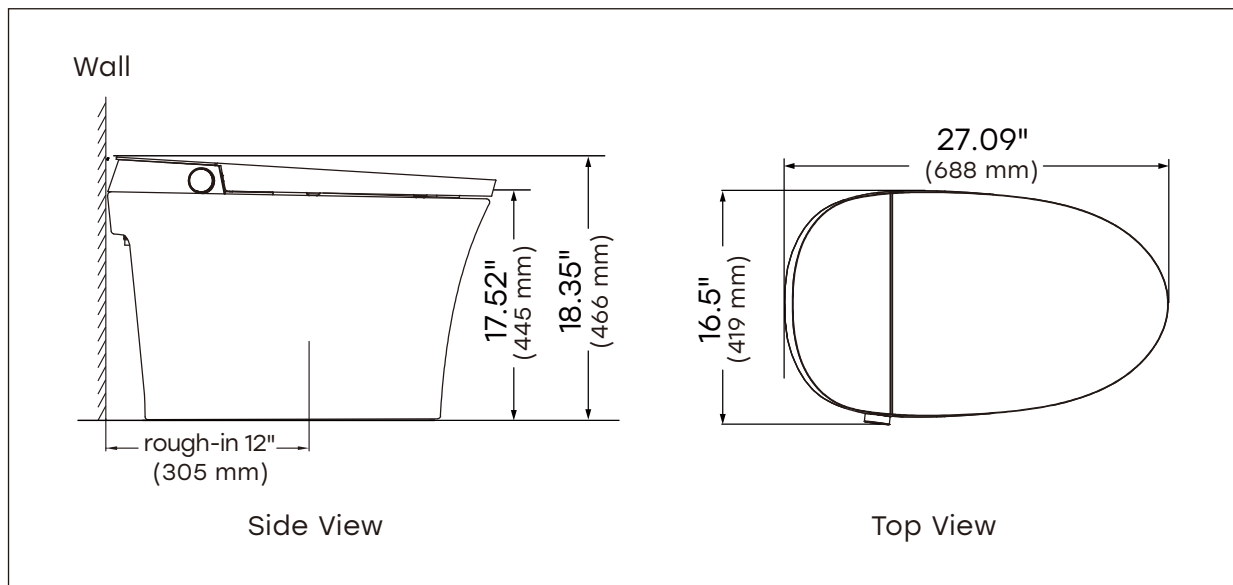

To ensure proper installation, the distance between the water supply valve and the centerline of the toilet should be greater than half the width of the toilet bottom. The water supply valve should be about 7.5 inches away from the toilet centerline. For larger valves, a greater distance may be necessary to ensure proper clearance.

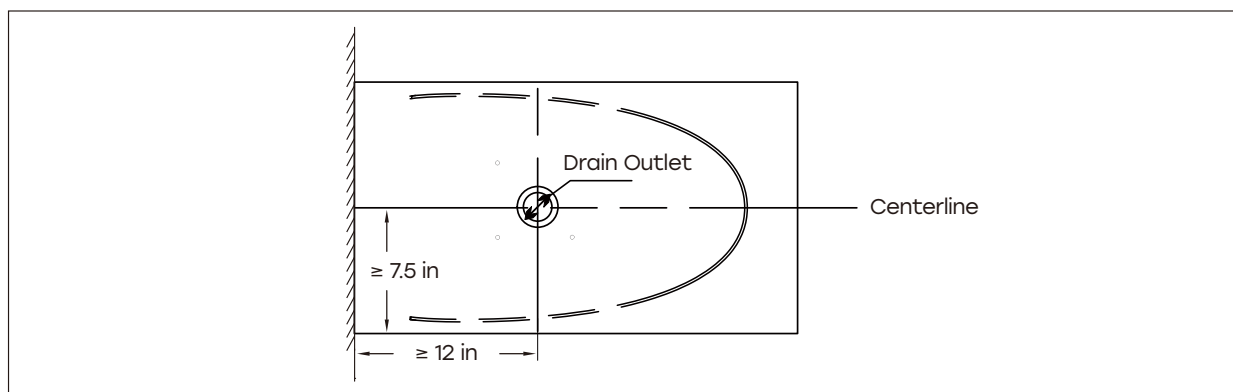

The minimum water pressure required is 13 psi, and the maximum water pressure is 108 psi. If the minimum water pressure is not met, the smart toilet may not achieve the optimal cleaning performance. However, since the product includes a built-in water tank and pump, its ceramic scouring effect is not affected by external water flow, pressure, or other environmental factors.

Electrical requirements for this product: 10 Amps at 120 V, 60 Hz.


Installation of Smart Toilet

Install your toilet using the following steps:

Please remove the old toilet first if any and ensure the mounting surface is clean and level before the new toilet is installed.

1 Open the box right side up

Remove the accessories first, then lift the toilet with two people, remove the packaging, and gently place the toilet on the floor, as shown in the diagrams below.

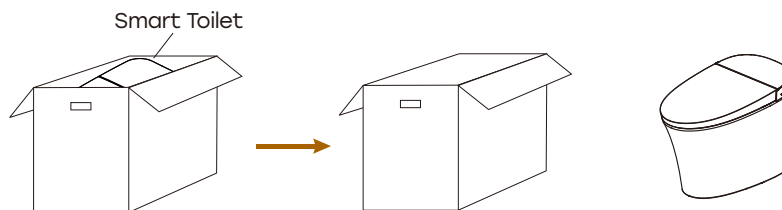

2 Install the angle valve


Turn off the water supply and then remove the existing supply stop valve.

Turn on the water supply and flush for 1 minute to clear any debris that may damage the toilet structure.

Turn off the water supply. Wrap Teflon tape around the threaded end of the water supply pipe to ensure a watertight seal. Screw the needed adapter onto the water supply pipe.

Connect the angle valve to the water supply pipe, using a gasket to prevent water leakage.

※ For the joint assembly, tighten the threaded joint 1 ~ 2 turns beyond finger tight, ensuring not to overtighten.

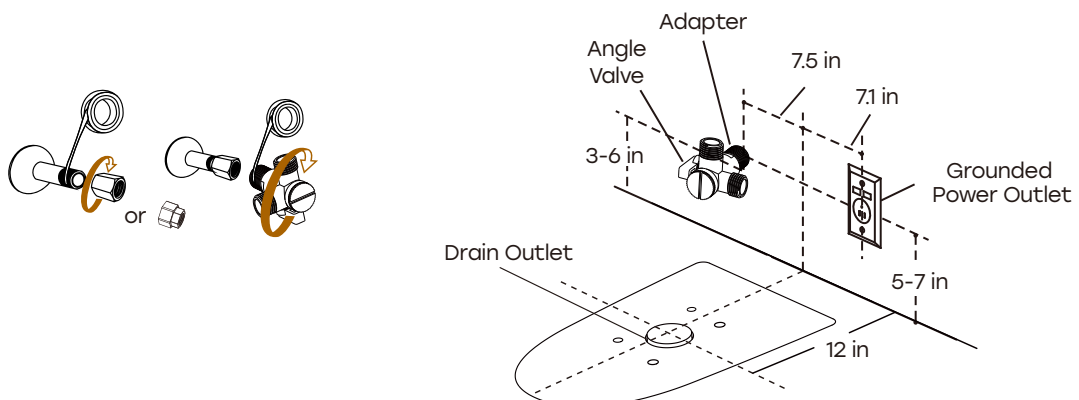


3 Install and fix the flange

Place the flange on the ground and align it with the centerline of drain outlet. Mark four mounting holes with the marking pen.

Drill four 0.39-inch (10 mm) holes at the marked locations. Insert four expansion bolts into the holes. Position the flange on the drain outlet, aligning the four flange holes with the drilled holes on the ground. Insert the screws into the flange holes and tighten them using a screwdriver.


Install the bolts on opposite sides of the flange on the ground.

※ If an applicable flange is already in place, there is no need to install the new one.

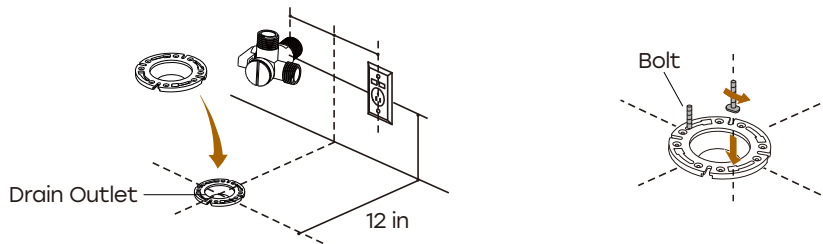


4 Install the mounting blocks

Assemble the mounting blocks with bolts, and position the two mounting blocks on opposite sides of the flange on the ground and secure them with washers and nuts.

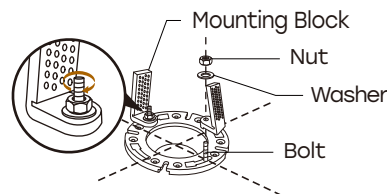


5 Install the ceramic toilet

Install the wax ring onto the drain hole at the bottom of the ceramic toilet and press it firmly into place.

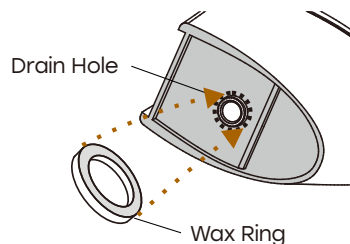


Lift the ceramic toilet with two people and gently lower it onto the flange, letting it well fit the mounting blocks.

Press down firmly on the ceramic toilet to ensure the wax ring forms a complete seal.

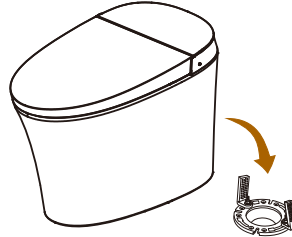

Insert the screw through the fixing sleeve, then through the holes on both sides of the ceramic toilet and into the mounting blocks on the ground. Tighten them securely using a screwdriver.

Put the decorative cap onto the fixing sleeve.

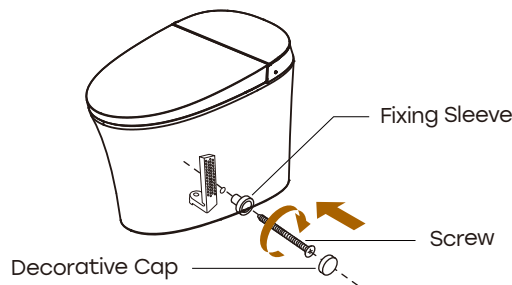

Note:


- ※ The toilet is heavy, and it needs two people to carry it.
- ※ Please clean the drain outlet.
- ※ Please make sure ceramic toilet outlet sits perfectly on the drain outlet.

6

Install the water hoses

Connect the flush water hose and the clean water hose to the installed angle valve and tighten them separately.

Use Teflon tape on all threaded connections to ensure a watertight seal.

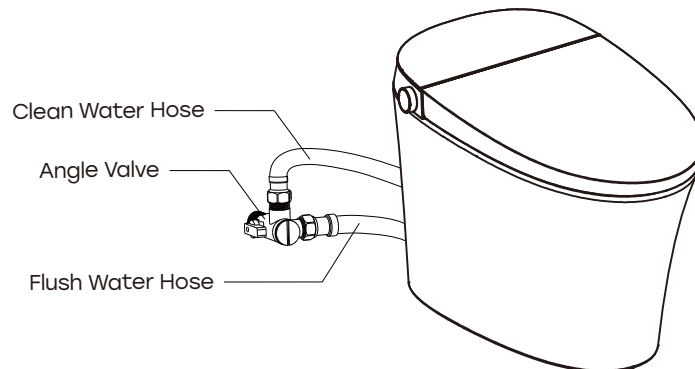

Installation of Battery Pack

The battery pack is primarily used for blackout flush in case of a power outage. It provides emergency power to the toilet. The battery box has been installed inside the toilet. Please note that the batteries needed are not included in the product package. For any questions, please contact our Customer Service Team.




Install the batteries

1. When the power is out, locate and hold the battery box from the cavity behind the ceramic toilet and untighten the plastic nut to remove the battery box from the connection cable.
2. Hold the top and bottom of the battery box to remove the battery box cover, insert the batteries needed and reinstall the battery box cover.
3. Insert the interface of the battery pack into the connecting cable and tighten the plastic nut securely.
4. Press the knob to flush the toilet once.


Note:

- ※ Store the battery box in a clean, dry, and well-ventilated area. Keep it away from corrosive substances, fire and heat sources.
- ※ 16 AA batteries are required. Please properly install the battery according to its correct polarity, otherwise the battery box may be damaged.
- ※ The battery pack is only used for blackout flush during a power outage. Please disconnect it in time when the power is restored.
- ※ The battery is disposable. Do not attempt to recharge it!

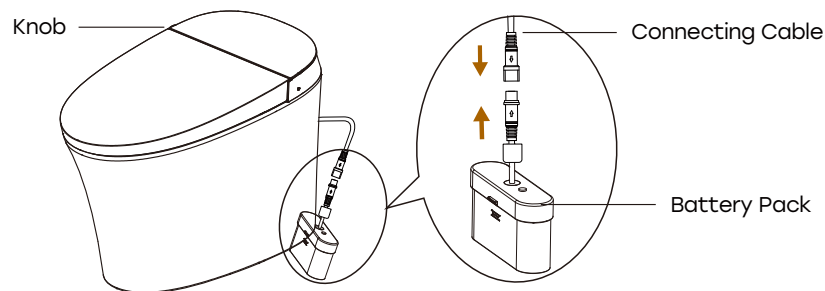

Replace the batteries

1. Locate and hold the blackout flush battery pack from the cavity behind the ceramic toilet and remove it from the connecting cable.
2. Hold the top and bottom of the battery box to remove the battery box cover, take out the used batteries, insert the new ones and reinstall the battery box cover.
3. Reconnect the battery pack in case of a power outage.

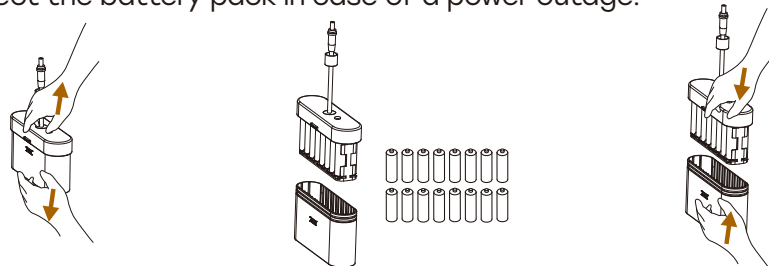

Installation of Remote Control Holder




Peel off the backing paper from the double-sided tape on the back of the remote control holder.


Attach the holder to the wall, pressing the tape firmly and evenly.

- ※ Clean the installation surface before mounting. Wait for 15 minutes after installation.
- ※ The remote control holder should be installed away from the bidet's spray trajectory.
- ※ The remote control holder should be installed within reach when seated on the toilet.
- ※ Make sure there is nothing to block the transmission between the toilet and its remote control.

①

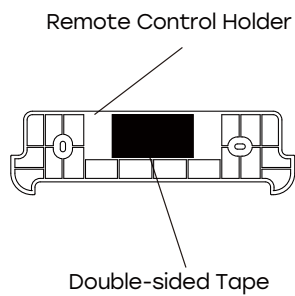

②

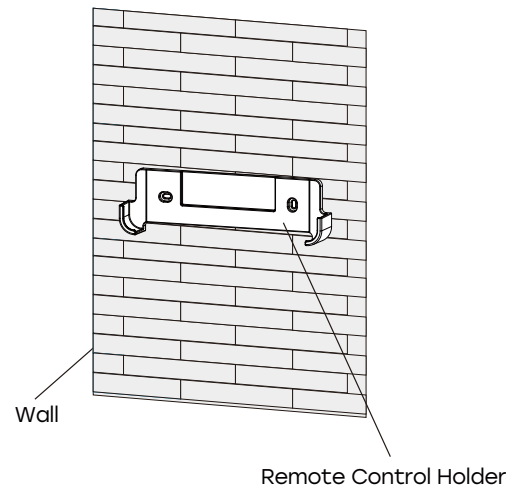


Product Test Run

1

Water Connection

Turn the water supply angle valve to the maximum opening, as shown in the diagram. Make sure no leakage is found at various connection parts.


※ In case of any water leakage, unfasten the nuts and install them again.

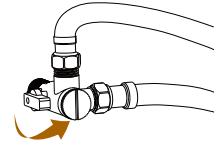

2

Power Connection

Ensure the electrical requirements are met: 10 A at 120 V, 60 Hz. Plug the power plug into AC 120 V socket. Press the knob on the toilet to start a flush and confirm the toilet is powered on.

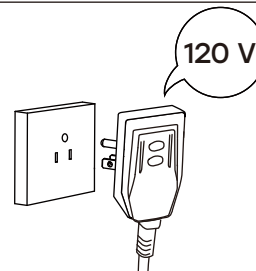

3

Smart Toilet Running

Are all functions working properly?



Test all function buttons on the remote control and the knob on the toilet.

Verify the normal operation of each function.

Operate the remote control and confirm the functionality of Front Wash, Rear Wash (including water pressure and nozzle position adjustment), Warm Dryer, Air Temperature and Water Temperature Adjustment, Nozzle Clean and Night Light.

All functions listed above should be tested. Please ensure all specified functions run correctly. Front wash, rear wash and warm air drying functions should be tested while the seat is occupied.

After the toilet is installed and the test run is completed, it is recommended that you apply the silicone sealant around the base of the toilet. Please avoid applying sealant where the access covers meet the floor.

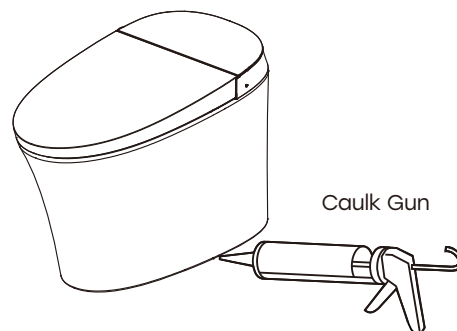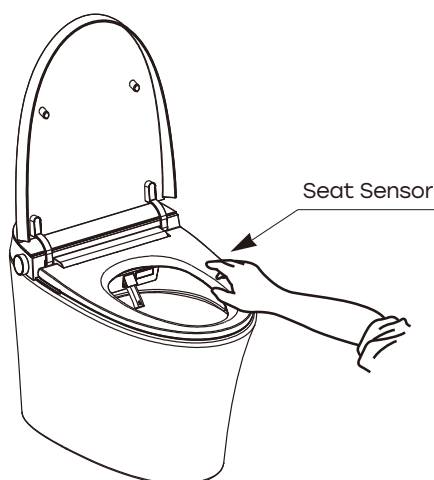

Usage Instructions

Function Explanations

+

Auto Flush


The toilet will automatically flush when the user stands up, and the seat sensor no longer detects a user.
The auto flush will not be repeated.



+

Drying Flush

Press **Dryer** on the remote control to activate the dryer to blow warm air.
A flush will be performed to eliminate unpleasant odors before the dryer is activated.
Front/rear wash is not available during the flush process.

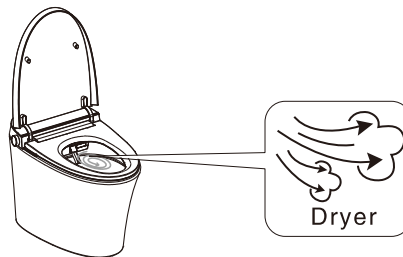

+

Blackout Flush


Blackout flush refers to the manual emergency flush during a power outage.
Press the knob to activate blackout flush.
If the above operation does not work properly, you need to replace the battery or contact our Customer Service Team.







LED Digital Display

When different functions are activated, the corresponding function animation is displayed or the indicator light is on.

The  icon indicates the seat temperature. When adjusting the temperature, the icon lights up, and the current temperature is displayed.

The  icon indicates the cleaning water temperature. When adjusting the temperature, the icon lights up, and the current temperature is displayed.

The  icon indicates that the flush function is activated.

The  icon indicates that the four seasons temperature sensing function is activated.



Auto Deodorization

The deodorization function will be activated automatically when the seat is occupied and will be turned off 1.5 minute after the seat is unoccupied.

A deodorizer cartridge and a fan are installed at the back of the toilet to help eliminate unpleasant odors and improve ventilation.





Foam Shield


A foam dispenser is embedded in the back of the toilet, using a dedicated foam cleaner to create a foam shield. The dense foam shield covers the water surface, effectively preventing splashing, isolating unpleasant odors and reducing airborne bacteria. Additionally, the foam lubricates the toilet wall, preventing waste from sticking and making cleaning more convenient.

Press **Foam shield** to generate a foam shield immediately when the seat is unoccupied. Or enable the auto foam shield function to let the toilet automatically create a foam shield when the seat is occupied.

Foam Cleaner Filling

The toilet needs to add foam cleaner for the first use. The foam cleaner is not included in the product package and must be purchased separately. If you want to purchase it, please contact our Customer Service Team. Additionally, the auto foam shield function is disabled by default. To enable it, please refer to the instructions in **Remote Control Operations**.

- ※ Before filling the foam cleaner, please unplug the toilet. Once the foam cleaner is added, reconnect the toilet to the power supply.
1. Lift the decorative panel up lightly to remove it, then take out the stopper from the filling port.
 2. Use the provided funnel to pour the foaming cleaner into the dispenser through the filling port.
 3. Reinstall the decorative panel back to the toilet.
 4. If the foam pump sounds louder than usual and no foam is released, it indicates that the foam cleaner is empty and needs to be refilled. Please follow the steps above to refill it.
- ※ Please use customized foam cleaner. Otherwise, it may cause clogging and damage to internal components.
 - ※ Do not exceed 500 ml when refilling, as this may cause overflow.
 - ※ When filling the foam cleaner or performing maintenance, be careful not to let sediment and other impurities fall into the filling port.

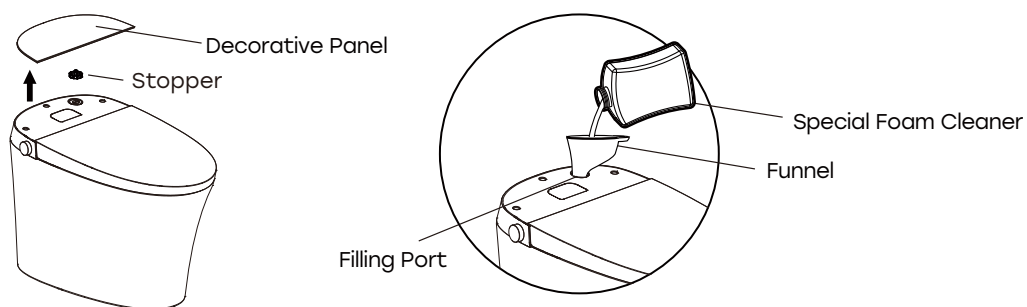




Plasma Sterilization

A negative ion generator is integrated into the toilet, releasing both positive and negative ions into the air. These ions disperse with the airflow from the fan, covering the toilet seat, ceramic surfaces, and surrounding area, effectively adsorbing dust, bacteria, and viruses to ensure a cleaner and more hygienic environment.

Plasma sterilization process will start automatically after the user leaves the seat if it has been occupied for at least 6 seconds. It will work for 2.5 minutes. When plasma sterilization is enabled, the fan is turned on at the same time.

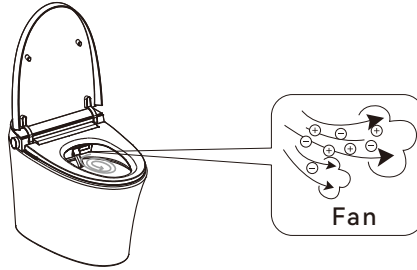

User-friendly Design

① Pre-wet

When the toilet seat is occupied, the product will flush automatically once towards the seat to moisten the toilet bowl. The water consumption for pre-wet is approximately 0.11 GPF.

② Multiple Protections

Multiple built-in safety features are designed to protect both the user and the product.

③ Memory Mode

The toilet automatically remembers and retains the last-used settings, including water temperature, seat temperature, warm air temperature, nozzle position and other user preferences. Such settings will revert to factory defaults in the event of a power failure.

④ Antibacterial Seat

The seat is made of antibacterial material to ensure enhanced hygiene.

⑤ Four Seasons Temperature Sensing


When enabled, the water temperature, seat temperature and warm air temperature will be adjusted automatically based on the ambient temperature, and the manual adjustment will be ineffective.

Foot Sensor Operations

+

The toilet is equipped with a foot sensor, located as shown below, allowing you to activate a flush after using the toilet.

Kick the foot sensor area with your foot to flush the toilet immediately after use.

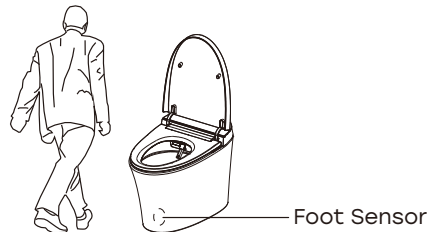

※ If the sensor area is kicked when the seat is occupied, it will not respond.

Knob Operations


+

Power/Stop

When the toilet is powered on and no one is seated, press and hold the knob for 3 seconds to enter the standby mode. The indicator light will be off.

When the toilet is in standby mode, rotate the knob clockwise or counterclockwise, or press the knob to enter the idle mode. The indicator light will turn pink.

When the toilet is in front/rear wash or drying mode, press the knob to stop the function. The indicator light will turn pink.

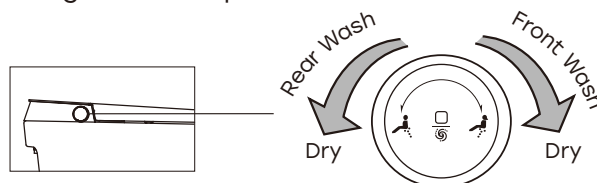

Rear Wash

Rotate counterclockwise

When the seat is occupied and the toilet is not in wash or drying mode, rotate the knob counterclockwise to start the smart rear wash cycle. Movement wash is provided by default. The entire process includes rear wash, auto flush and warm air drying, taking approximately 6 minutes.

During the smart rear wash, rotate the knob counterclockwise to stop the wash and activate the warm dryer. The indicator light will turn blue for rear wash, and red for warm air drying.

Front Wash


Rotate clockwise

When the seat is occupied and the toilet is not in wash or drying mode, rotate the knob clockwise to start the smart front wash cycle. Movement wash is provided by default. The entire process includes front wash, auto flush and warm air drying, taking approximately 6 minutes.

During the smart front wash, rotate the knob clockwise to stop the wash and activate the warm dryer. The indicator light will turn pink for front wash, and red for warm air drying.

※ When the seat is unoccupied and the toilet is not in use, press the knob to activate a flush.

Remote Control Operations

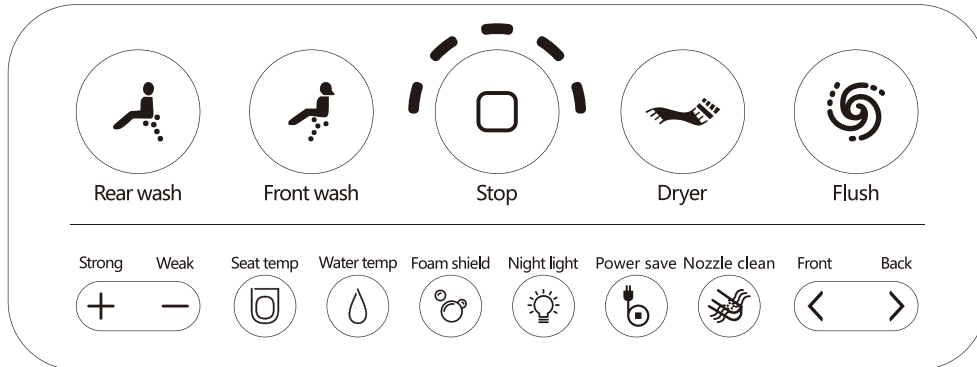

Press **Rear wash** to start rear cleaning. Press again to activate movement wash, and press a third time to return to rear wash. It will stop after approximately 4 minutes.

Press **Front wash** to start feminine cleaning. Press again to activate movement wash, and press a third time to return to front wash. It will stop after approximately 4 minutes.

Press and hold **Front wash** for 3 seconds to enter the child wash mode. In this mode, front wash, rear wash or drying function can be used without occupying the seat. The toilet will automatically exit child wash mode after 30 minutes, or you can press and hold **Stop** for 3 seconds to exit the mode immediately.

- ※ In this mode, the seat temperature is set to medium level and cannot be adjusted, while the water temperature and warm air temperature remain adjustable.
- ※ Since cleaning functions are not restricted by seat occupancy detection, water splashing may occur. Please supervise children to prevent unintended use or play.

Press **Stop** to stop any activated wash functions (front wash or rear wash) or the dryer. Press and hold **Stop** for 3 seconds to turn off the toilet (The toilet is in standby mode at this time).

Press **Dryer** to dry off the water after using the wash function. It will stop after approximately 4 minutes.

Press and hold **Dryer** for 3 seconds to enable/disable auto deodorization and plasma sterilization. When enabled, the No. 3 level light (counting from left to right) on the remote control will illuminate.

Press **Flush** to flush the toilet after use.

Press and hold **Flush** for 3 seconds to enable/disable the auto flush function. When enabled, the No. 4 level light on the remote control will illuminate.

Press **Strong/Weak** to adjust the cleaning intensity during front or rear wash. Press **Strong** to increase the intensity and **Weak** to decrease it.

Press **Strong/Weak** to adjust the warm air temperature during drying. Press **Strong** to increase the temperature and **Weak** to decrease it.

Press **Seat temp.** to adjust the heated seat temperature while seated. Four seat temperature levels are available: normal, low (91 °F), medium (97 °F) and high (102 °F). Each press will adjust the temperature in the following sequence: medium - high - medium - low - normal - low - medium, cycling continuously.

- ※ To prevent low-temperature burns, the seat temperature will automatically be reduced to below 95 °F after 10 minutes of continuous seating.

Press **Water temp.** to adjust the water temperature for any wash function. Four water temperature levels are available: normal, low (91 °F), medium (97 °F) and high (102 °F). Each press will adjust the temperature in the following sequence: medium - high - medium - low - normal - low - medium, cycling continuously.

Press **Foam shield** to start to generate a foam shield immediately while unseated.

Press and hold **Foam shield** for 3 seconds to enable/disable the auto foam shield function. When enabled, the No. 2 level light on the remote control will illuminate. And the toilet will automatically create a foam shield over water surface in the bowl whenever the seat sensor detects a user.

Press **Night light** to turn the night light on or off.

Press **Power save** to enable/disable four seasons temperature sensing. When enabled, the No. 5 level light on the remote control will illuminate.

This function is disabled by default. When enabled, the water temperature, seat temperature and warm air temperature will be adjusted automatically based on the ambient temperature, and the manual adjustment will be ineffective.

When the ambient temperature is below 59 °F, the seat temperature, water temperature and warm air temperature will be automatically adjusted to Level 4 (High Level); When the ambient temperature is 59 °F to 77 °F, the seat temperature will be automatically adjusted to Level 2, and the water temperature and warm air temperature will be automatically adjusted to Level 3; When the ambient temperature is 77 °F to 86 °F, the heated seat function is turned off, and the water temperature and warm air temperature are automatically adjusted to Level 2; When the ambient temperature is over 86 °F, the heated seat function is turned off, the water temperature is automatically adjusted to the Level 2, and the warm air temperature is automatically adjusted to Level 1.

Press **Nozzle clean** to extend the nozzle out while unseated, and the water will flow out, allowing the user to clean it manually.

※ The nozzle will automatically clean itself before and after any wash function.

Press **Front/Back** to adjust the nozzle position.



Remote Control Settings for Special Modes

• Settings Mode

If entering this mode, the remote control can be used to enable or disable the automatic functions of the toilet as described below.

Press and hold **Water temp.** and **Power save** simultaneously until the No. 3 level light  flashes to enter the Settings Mode.

Note: The pre-wet function and the LED digital display are enabled by default from the factory, whereas others remain disabled. To make adjustments, please enter into the Settings Mode to enable or disable these functions.

A single illuminated level light  indicates that the function has been enabled, while 2 illuminated level lights  indicate that the function has been disabled.

Press **Night light** to enable/disable the Do Not Disturb function (buzzer).

※ When enabled, no audio prompts will be heard during knob and remote control operations.

Press **Foam shield** to enable/disable the pre-wet function.



Press **Dryer** to enable/disable the LED digital display.


After the settings needed are completed, press **Stop** to save them and exit the Settings Mode. If no operation is done within 15 seconds after entering Settings Mode, the mode will automatically exit.

Code Pairing of Remote Control


The remote control is pre-paired with the smart toilet at the factory for immediate use. However, if the remote control isn't functioning properly, or if you own multiple toilets of the same brand and experience interference when operating them, you can manually pair the remote control with the toilet.

+

Unplug the toilet. Press and hold **Foam shield**  and **Night light**  for a few seconds until all the level lights constantly flicker.

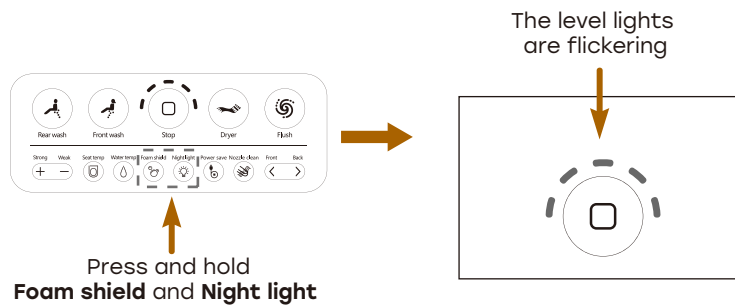

Place the remote control near the product and plug the attaching plug in 5 seconds.

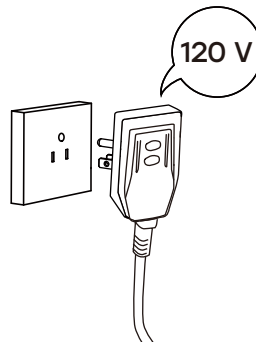

The level lights stop flickering, and then they are lighted on. Codes are paired successfully when all lights are on.



Daily Maintenance

Regular maintenance is required to ensure normal use.

+


Note:

1. Cut off the power and water supply before maintenance.
2. Direct water wash to the entire product is prohibited.

+

Warning:


Do not spray water or detergents on the toilet, remote control or the power cord. Doing so may cause electric shock or fire.

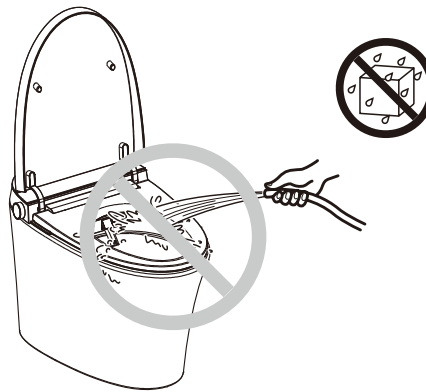

Maintenance of Ceramics, Seat and Lid

+

1. Wipe dust or stains with a soft wet cloth.
2. A wet soft brush, cloth, or sponge may be used to clean the ceramic area.

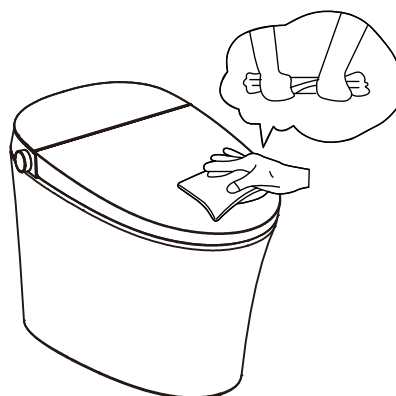

※ Do not use abrasive cleaners, such as alcohol, bleach, painter thinner, cresol, benzene, gasoline, etc.

Maintenance of the Nozzle

+


Press **Nozzle clean** on the remote control without occupying the seat when the toilet is powered on. The nozzle will extend out. Proceed to clean it with a soft toothbrush.

Press **Stop** on the remote control to return the nozzle to the original position.

Nozzle Replacement

When the nozzle is extended, gently pinch the front end of the nozzle with your hand, pull it lightly, and then insert a new one.


- ✘ Do not use steel brush to clean it.
- ✘ Do not bend the nozzle head.

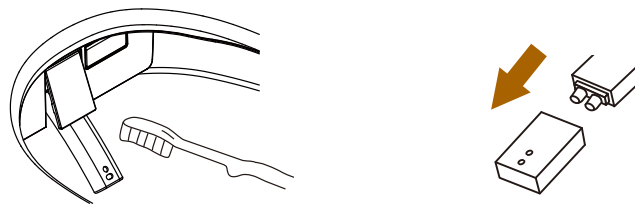

Cleaning of the Filter


+

If the water pressure is too low or insufficient, please clean the filter. Turn off the angle valve to stop the water supply. Use a flathead screwdriver to unscrew the filter cover, then remove the cover as shown below.

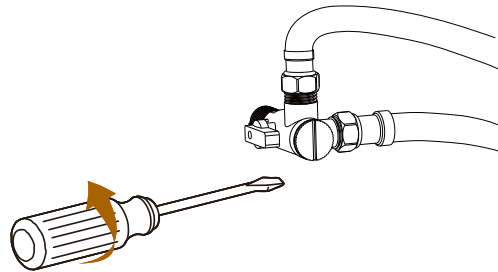

Take out the filter and clean it thoroughly. You can rinse off dirt or gently clean it with a toothbrush.

- ✘ Do not use any cleaning agents. Clean the filter with water only.
- ✘ Be careful not to crush or distort the filter while cleaning.

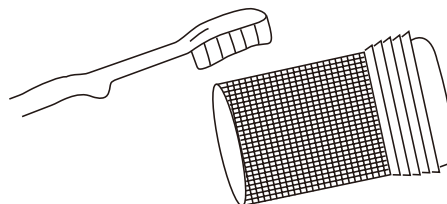

Reinstall the filter in the reverse order of removal. After installation, open the angle valve and check for any water leakage.

Maintenance During Winter Season

During the winter season, the water inside may freeze after long periods of storage and non-use. Please take measures to prevent.



Note:

1. Before connecting the product to the water supply and electrical outlet, allow it to defrost for 30 minutes in a warm indoor environment.
2. In cases of extreme cold/freezing/nozzle stuck in place, wrap the water input line with a warm towel. Never pour hot water or use a hot dryer directly on the toilet.

Troubleshooting

This Troubleshooting Guide is for general aid only. If the user encounters any problems, please first consult the troubleshooting guide below. If the problem persists, please contact our Customer Service Team.

Power Button		
Phenomenon	Fault Diagnoses	Solutions
Not working	Check whether the attaching plug is loose or not	Please check the circuit
	Check whether the power is switching on or off (the power light is not on)	Press and hold the knob, the power light is on
	Check whether there is any electric leakage or not	Unplug the attaching plug from the socket, plug it again later, if it is still not working, please unplug the attaching plug and contact our Customer Service Team
Wash Functions		
Phenomenon	Fault Diagnoses	Solutions
No water comes out while cleaning	Check whether the pressure of water supply is low or not	Increase the water pressure
	Check whether the water filter is blocked or not	Clean the filter according to the Installation & User Manual
The water temperature is not warm enough	Check whether the water temperature switches to low level or not	Regulate the water temperature according to the Installation & User Manual
Heated Seat		
Phenomenon	Fault Diagnoses	Solutions
The seat temperature is too low or is not hot	Check whether the temperature of toilet seat is on the OFF position or not	Regulate the temperature of toilet seat according to the Installation & User Manual
Seat and lid are loose	Check whether the fixed bolts are loose or not	Tighten the bolts
LED Digital Display		
Phenomenon	Fault Diagnoses	Solutions
The seat temperature is not displayed	Key fault	Reboot or contact our Customer Service Team
The water temperature is not displayed		
The icon doesn't light up		

Remote Control

Phenomenon	Fault Diagnoses	Solutions
Remote control failed	Low battery	Please replace new battery
No response when pressing the key	Key fault	Reboot or contact our Customer Service Team
Water temperature, seat temperature and warm air temperature cannot be adjusted	Check whether the four seasons temperature sensing function is enabled	Disable the four seasons temperature sensing function and adjust the temperature again

Ceramic Toilet

Phenomenon	Fault Diagnoses	Solutions
Water leakage	Check whether the shutoff valve, water supply hose and water separator are well connected or not	Reconnect them carefully

Specifications

Product Model		Uncle Brown ST12P
Product Dimensions		27.09 in (L) * 16.5 in (W) * 18.35 in (H)
Product Weight (lb.)		88.18 lb
Rough In Size		12 in
Seat Height		17.52 in
Bowl/Seat Shape		Elongated
Flush Type		Tornado flush
Gallons Per Flush (US gallon)		Single Flush: 1.28
Installation Type		Floor-mount
Rated Voltage		120 V~
Rated Frequency		60 Hz
Rated Power		1200 W (When inlet water temperature is 59 °F)
Power Cord Length		39.37 in
Water Supply Type		DN15 (G1/2")
Water Inlet	Inlet Water Temperature	41 °F ~ 95 °F
	Minimum Pressure	13 psi
	Maximum Pressure	108 psi (static state)
Cleaning	Way for Heating	Instant Heating
	Temperature of Warm Water	Off/about 91.4 °F ~ 102.2 °F (4 levels)
	Safety Devices	Thermostat series, thermal fuse, flow detection device
Dryer	Warm Air Temperature	Off/about 95 °F ~ 129.2 °F (4 levels)
	Safety Devices	Bimetal thermostat series, thermal fuse
Heated Seat	Seat Temperature	Off/about 91.4 °F ~ 102.2 °F (4 levels)
	Safety Devices	Thermal fuse, temperature sensor
Remote Control Battery		Two AAA batteries
Blackout Flush Battery		Sixteen AA batteries (Separate purchase required)

Warranty

ONE YEAR LIMITED WARRANTY

Uncle Brown® products are made with high-quality materials and workmanship to provide customers with products that are built to last. If any defects in material or workmanship are detected during normal use within the first year of purchase, such as the replacement of any product or product part that you consider to be defective, Uncle Brown® will provide replacement parts free of charge. We are **not responsible** for all damages that result from **improper installation resulting in unavailability, repair and maintenance**. This warranty applies only to the original purchaser. Proof of purchase and **evidence of damage** will be required in the case of a **claim**.

Uncle Brown® recommends the installations to be made by a licensed, professional plumber.

Uncle Brown® will not be held responsible for any damage or product failure due to improper installation, misuse, or failure to use a licensed professional. Uncle Brown® is not responsible for any removal or installation cost.

This One Year Limited Warranty will be voided if:

The installation recommendations were not followed.

The product has been moved from its initial place of installation.

The product has been modified.

The product has been subjected to improper maintenance, abuse, misuse, excessive use of chemicals, accident or other damages.

Uncle Brown® makes no implication that products comply with any or all local building or plumbing codes. It is the consumer's responsibility to determine local code compliance. This warranty extends to the original purchaser and first consumer.

Uncle Brown® is not liable for any incidental, consequential or special damages associated with the return, replacement, installation or use of your product. This includes freight costs, labor, travel time, lost profit, home damages and other contingent liabilities and costs (including, without limitation, costs associated with experts, investigations, analyses, attorneys and other professionals and services).

The Uncle Brown® warranty is a comprehensive and explicit limit of liability, and all items outside of it are not addressable by or the responsibility of Uncle Brown®. Certain states have variances regarding implied warranties and in those situations, we remain fully compliant.



For any questions or claims, please contact us by phone or email.

Phone: (+1)209-528-9961

Monday to Friday

Email: support@unclebrowna.com

When making a claim, please prepare a photo of the evidence of damage so that we can quickly resolve the claim for you.



Warning

Content may contain sharp and other possibly harmful pieces and may cause hazard to children and adults, Uncle Brown® is not responsible in any way for personal damage.